


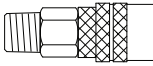





 




AIR SOURCE RELOCATION KIT

P/N's 90009-90010

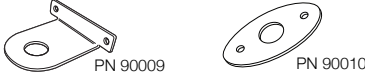PARTS LIST:

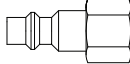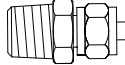1/4" AUTOMATIC QUICK CONNECT COUPLER		1pc.
Quick Connect Coupler Protective Cover		1pc.
BULK HEAD FITTING (1/4" NPT, 1/4" AIRLINE)		1pc.
MOUNTING BRACKET (self tapping screws included - 2pcs)		1pc.
FLAT WASHER		2pc.
LOCK WASHER		1pc.
1/4" QUICK CONNECT STUD		1pc.
1/4" COMPRESSION FITTING		1pc.
1/4" AIR LINE TUBING		15ft.
AIR LINE CLIP		3pcs.

IMPORTANT:

It is essential that you and any other operator of this product read and understand the contents of this manual before installing and using this product.

**SAVE THIS MANUAL FOR FUTURE REFERENCE
USER MANUAL**

AIR SOURCE RELOCATION KIT TYPICAL INSTALLATION LAYOUT


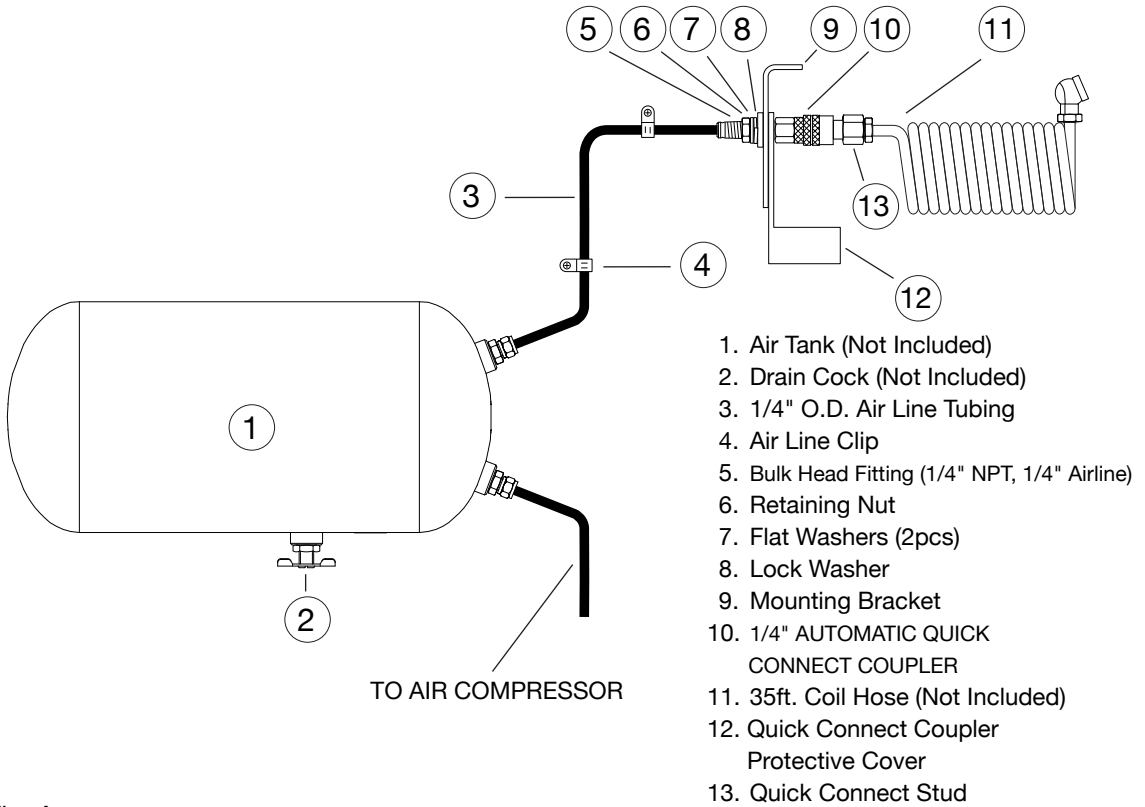


Fig. A

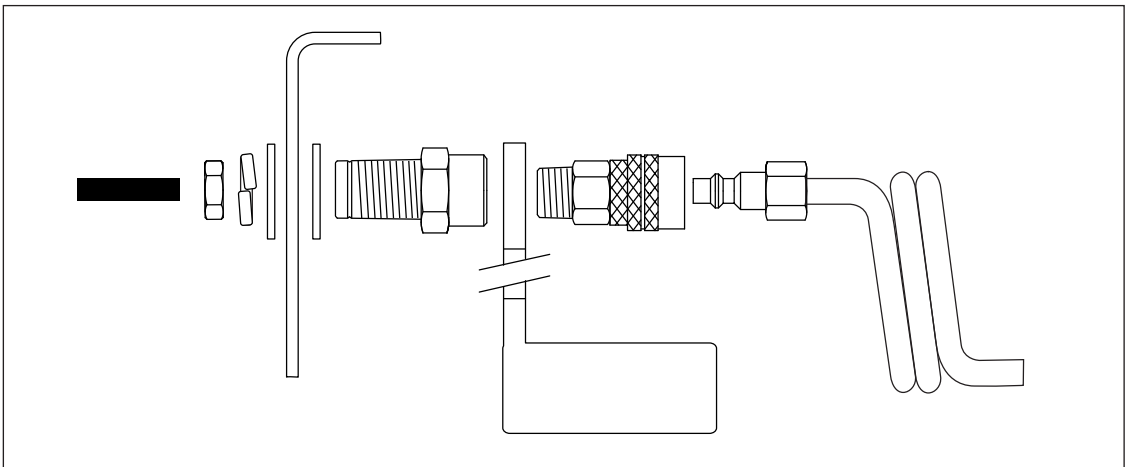

INSTALLATION INSTRUCTIONS (CONT'D)

INSTALLATION INSTRUCTIONS

The Pro Series Air Source Relocation Kit allows you to extend the air source from your air tank via air line and fittings connections to a more accessible or convenient location using our unique bracket in either Oval Style (PN 90010) or L Style bracket (PN 90009).

Step 1: Select location to relocate your Air Source

Select a convenient location to relocate your air source. Mount the Mounting bracket at your desired location using the provided self-tapping screws. Insert the bulk head PTC fitting into the mounting bracket and secure with the washers and nut (see Fig. A), insert the Quick Connect Dust Cap then attach the Quick Connect Coupler to the 1/4" Female NPT fitting of the bulkhead fitting.

Step 2: Connecting 1/4" Compression Fitting to Air Tank

Before connecting the Compression Fitting first make sure that the air tank is depressurized. Remove any fitting that is on the air supply port of the air tank. Install Compression Fitting onto air tank. (Fig. A)

FEW WORDS ABOUT WORKING WITH AIR LINE TUBING...

- a. When cutting air line tubing, always cut as squarely as possible. Use a hose cutter or razor blade.
- b. To ease insertion of air line tubing onto fittings, lightly lubricate tip of air line tubing, or soak air line tubing in warm water for about 5 minutes to soften air line.
- c. When routing air line tubing, always remember to avoid sharp edges, heat source, and tight bends (Air line must be routed at least 12" away from exhaust systems & components).

Step 3: Install Air Line Tubing onto 1/4" Compression Fitting

To install Air Line Tubing, remove collar of the Compression Fitting, insert air line tubing through collar, then, push air line tubing into Compression Fitting until air line completely covers the barb of the Compression Fitting. Tighten collar onto Compression Fitting.

Step 4: Routing Air Line From Air Tank to Bracket

Route air line from air tank to pre-selected air source location. Use air line clips provided in your kit to secure air line to vehicle (Fig. A) Measure and cut air line to appropriate length. Attach Airline to the PTC fitting.

Step 5: Checking for Leaks

Use soap and water solution to test for leaks. If a leak is detected, the air line may not be pushed all the way in or cut squarely, or fittings may not have been properly sealed and tightened. Repeat steps needed to stop leaks.

Your Pro Series Relocation kit is ready to be used!

INSTALLATION INSTRUCTIONS

LIMITED WARRANTY:

VIAIR® Corporation warrants this product, when properly installed and under normal conditions of use, to be free from defects in workmanship and materials for a period of one year from its original date of purchase. To receive warranty service or repair, please contact VIAIR® Corporation.

Returns should be made within one year of the date of purchase, after a Return Goods Authorization (RGA) number has been assigned by VIAIR® Corporation. To obtain RGA, fax a copy of your receipt to (949) 585-0188. For complete warranty details, please visit: www.viaircorp.com/warranty

PLEASE NOTE:

THIS WARRANTY COVERS PRODUCT DEFECTS ONLY; IT DOES NOT COVER INCIDENTAL OR CONSEQUENTIAL DAMAGES AS RESULT OF MISUSE OR ABUSE.

This Manual is proprietary to VIAIR® Corporation and no ownership rights are hereby transferred. No part of the Manual shall be used, reproduced, translated, converted, adapted, stored in a retrieval system, communicated or transmitted by any means, for any commercial purpose, including without limitation, sale, resale, license, rental or lease, without the prior express written consent of VIAIR®.

VIAIR® does not make any representations, warranties or guarantees, express or implied, as to the accuracy or completeness of the Manual. Users must be aware that updates and amendments will be made from time to time to the Manual. It is the user's responsibility to determine whether there have been any such updates or amendments. Neither VIAIR® nor any of its directors, officers, employees or agents shall be liable in contract, tort or in any other manner whatsoever to any person for any loss, damage, injury, liability, cost or expense of any nature, including without limitation incidental, special, direct or consequential damages arising out of or in connection with the use of the Manual.

All third party product names, logos, and brands are property of their respective owners. All company, product service and trademark names are for identification purposes only. Use of these names, logos, and brands does not imply ownership or endorsement.



15 EDELMAN • IRVINE, CA 92618
TEL: (949) 585-0011 • FAX: (949) 585-0188
www.viaircorp.com